



DO NOT DISMANTLE!

The elaborated internal linkage and coil spring construction remains hidden from view. Dismantling any part can lead to irreversible damage and can cause serious injuries. Any servicing is strictly reserved to BIQUAD personnel or authorized partners. Visit our website for contact information.

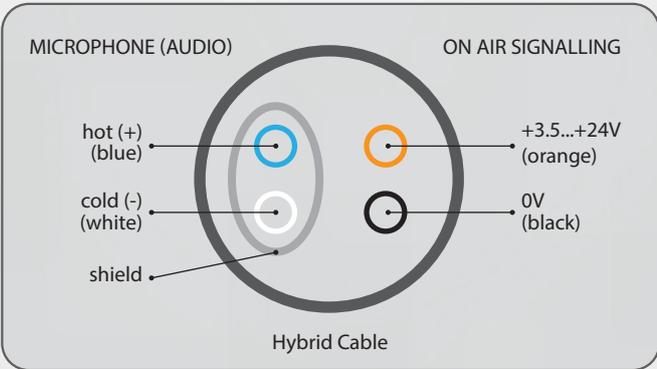

FEED REGULATED DC!
 Feed +3.5...+24V to activate ON AIR Signalling.
 Current drain: 40mA

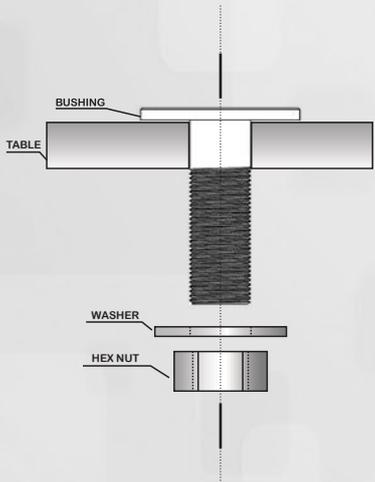

- INSTALLING THE BUSHING**
- 1 Drill a through hole on the table with the measures between 20mm (min) and 22mm (max);
 - 2 Insert the Bushing through the hole and secure it with the washer and hex nut by applying the necessary torque on the nut to make the Bushing firm;
 - 3 After setting the Bushing, install the TOP ARM following the recommendation of connecting the wires according to the drawing;